

**SCREW AIR COMPRESSOR CONTROLLER**  
**MAM-KY02S ( B ) - ( VIII )**  
**(Monitor-200)**

**USER**  
**MANUAL**

**Shenzhen Plot Electronic Co., Ltd**

Address: 4-5F,5 Bldg,Highstar Industry Park,Guangtou Community,  
Bantian,Longgang District,Shenzhen City, China

Telephone: (+86 0755) 83173599 / 83172822      Postal code: 518129

Fax: (+86 0755) 83172966

E-mail: [plt@pltsz.com](mailto:plt@pltsz.com)

Web site: [www.pltsz.com](http://www.pltsz.com)

## **VOTE OF THANKS**

Thank you for your trustworthy and select of PLOT air compressor controller !

Shenzhen Plot Electronic Co., Ltd specializes on the manufacture and R&D of air compressor controller. We are devoted to win customer trust through our high quality products and service.

We try our best to ensure the completeness and correctness of the manual, but PLOT Company shall reserve the rights for continuous research and improvement on its products and assume no obligation for the modification and improvement on the previously delivered products. The design of products is subject to the change without notice.

Please feel free to contact our after-sale service center if you encounter any problem with our product.

You are always welcome to make suggestions and advices!



## NOTICE



Please read all the operation manual before operating the set and keep this manual for further reference.



Installation of MAM—KY\*\* compressor controller can be performed only by professional technicians.



Installation position shall be considered carefully in order to ensure good ventilation and reduce electromagnetic interference.



Wiring shall be performed respectively according to regulations for heavy and weak current to reduce electromagnetic interference.



RC snubber must be connected to the two terminals of coil (such as AC contactor ,valve, etc),which are controlled by relay output.



Port connection shall be inspected carefully before power on.



Correct ground connection (the third ground)can help increase product capacity of resisting signal interference.



Set rated current of motor: the max current of motor/1.2.

### Features:

- Chinese / English display.
- Short circuit, current block, current open phase, current overload, current unbalance protection for motor
- On-off control and running control of motor.
- Prevention for air compressor reversal
- Temperature measurement , control and protection
- Control pressure balance by adjust load rate automatically
- High integration , high reliability ,high cost performance.
- Remote control/Local control.
- Block mode/Independent mode.
- RS-485 communication function,

# Contents

|   |    |
|---|----|
| <b>1, Basic Operation</b> .....                                     | 5  |
| <b>1.1, Button Explanation</b> .....                                | 5  |
| <b>1.2, Status Display and Operation</b> .....                      | 6  |
| <b>2, Controller Function and Technical Parameter</b> .....         | 12 |
| <b>3, Model and Specification</b> .....                             | 12 |
| <b>3.1, Model explanation</b> .....                                 | 12 |
| <b>3.2 Power specification sheet for corresponding motor.</b> ..... | 13 |
| <b>4, Installation</b> .....  | 13 |
| <b>4.1, Mechanical Installation</b> .....                           | 13 |
| <b>4.2, Electrical Connections</b> .....                            | 15 |
| <b>5, Alarm Function</b> .....                                      | 16 |
| <b>5.1、Monitor Indication</b> .....                                 | 16 |
| <b>5.2, Controller Indicator</b> .....                              | 16 |
| <b>6, Controller Protection</b> .....                               | 17 |
| <b>7, Troubleshooting</b> .....                                     | 18 |
| <b>7.1、This Fault Review</b> .....                                  | 18 |
| <b>7.2、Common Failures and Causes:</b> .....                        | 18 |
| <b>8, Schematic Diagram:</b> .....                                  | 20 |

# 1, Basic Operation

## 1.1, Button Explanation



Picture 1

### I—Start Button:

- 1, When compressor is at stop status, press this button to start the compressor.
- 2, When compressor is set as master ( No.1 ) in block mode ,press this button to start the compressor and activate block mode function at the same time.

### O—Stop Button:

- 1, When the compressor is at running status, press this button to stop the compressor;
- 2, When compressor is set as master (No.1 ) in block mode ,press this button to stop compressor and block mode function as well.

### ↓↑—Load / unload Button:

When the compressor is at running status ,press this button to load or unload ;

### S—Set Button:

1. When modifying data, press this button after modification to save and confirm the modified data.
2. When the compressor is at password setting status ,press this button to save and confirm the password

### ↑—Move up button/Increasing button:

- 1, when viewing the menu, press this button to move upward the cursor ;
- 2, When modifying data, press this button to increase the data at current position .

### ↓—Move down button / Decreasing button:

- 1, When viewing the menu, press this button to move downward the cursor;
- 2, When modifying data, press this button to decrease the data at current position.

→ **Shift button / Enter button:**

- 1, When modifying data, press this button to move to the next data bit;
- 2, when select menu, press this button to switch to submenu. If no submenu available, the controller will shift to data setting mode.

**C** **Return button / Reset button:**

- 1, When modifying data, press this button to exist data setting mode;
- 2, When viewing the menu, press this button to return to previous-menu;
- 3, When the controller is at failure stop status, long press this button to reset.

## 1.2, Status Display and Operation

The display screen will show as below after power on:

WELCOME

SCREW COMPRESSOR

After 5 seconds, the menu will switch as below:

DISC T: 20°C

AIR P: 0.60Mpa

RUN STATUS: NORMAL STOP

ADD: 001                      LOCAL

Press “↓” to enter into Selection Menu:

**RUN PARAMETER**

CALENDAR

CUSTOMER

PARAMETER

### 1.2.1, Operating Parameter and Menu

Press “↓” or “↑” to move the cursor to “RUN PARAMETER”, then press “→” to switch to secondary menu:

**MOTOR、FAN CURR**

TOTAL RUN TIME

THIS RUN TIME

MAINTENANCE PARA

Move the cursor to “MOTOR,FAN CURR”, press “→” to switch to secondary menu:

CURR(A): R    S    T

MOTOR: 56.1 56.2 56.0


FAN: 4.1 4.1 4.1

Press “RESET”, to return to the previous menu or the main menu. If no operation at the current menu for 120 seconds , controller will automatically return to the main menu and turn off the back light simultaneously.

According to above method, use move down “↓” ,move up button“↑”, enter button“→”and return button “RESET” to check TOTAL RUN TIME,THIS RUN TIME,MAINTENANCE PARA,FAULT RECORD, PROD.DATE、SERIAL,THIS FAULT and return to previous menu.

### 1.2.2, Calendar

Check and set time of controller

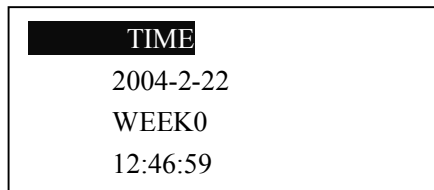


### 1.2.3, Customer Parameter


A, Customer parameter view and modification

It is not allowed to modify CUSTOMER PARAMETER and FACTORY PARAMETER in running status and STOP DELAY


The check and modification of CUSTOMER PARAMETER is similar with RUN PARAMETER. Take UNLOAD P as example: Move “↓”or“↑”to CUSTOMER PARAMETER and then press “→”to switch to below menu

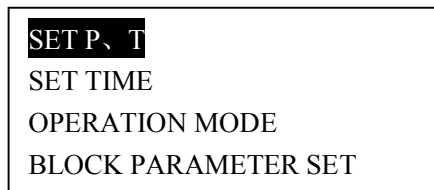

press “→” to switch to below menu

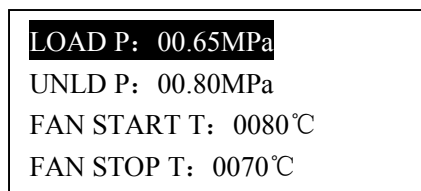

Move the cursor to item LOAD P, then press “→” to switch to the following menu which requires a user password input.

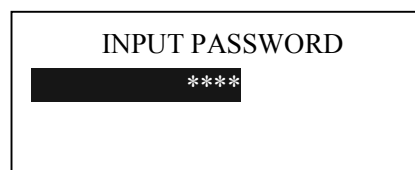

**Note: User password can be modified in customer parameter and FACTORY PARAMETER**

is fixed as

In this menu, the first data bit of password starts blinking, press “↓” or “↑” to modify the first bit of password, Press “→” to move the cursor to the next data bit, modify the second data of password in accordance with the above , and modify the third and fourth data of password in sequence. Press “S” to confirm the input data and the menu will switch to the following menu after verification:

|                     |
|---------------------|
| LOAD P: 00.65MPa    |
| UNLD P: 00.80MPa    |
| FAN START T: 0080°C |
| FAN STOP T: 0070°C  |

“\*” in the right up corner indicates that the data is at a setting status

In the menu above , press “→” , the first data of LOAD P starts blinking , user can press “↑” or “↓” to modify the present data in accordance with the above method .Press “→” to move to next data and modify the target data in sequence. When finished, press “S” to confirm and save the data.

#### B, Customer Parameter Sheet and Function

| First menu | Second menu      | Preset Data | Function  |
|------------|------------------|-------------|---|
| SET P、 T   | LOAD P           | 00.65MPa    | 1,In AUTO load mode , compressor will load if pressure is below this set data<br>2,In STANDBY mode, compressor will start if the pressure is below this set data                    |
|            | UNLD P           | 00.80MPa    | 1,Compressor will unload automatically if air pressure is above this set data<br>2.This data should be set above LOAD P ,also should be set below UNLD P LIM                        |
|            | FAN START T      | 0080°C      | Fan will start if DISC T is above this set data   |
|            | FAN STOP T       | 0070°C      | Fan will stop if DISC T is below this set data  |
| SET TIME   | MOTOR START TIME | 0008S       | Set the MOTOR START TIME. Record time when motor is activated, controller will not start overload protection during this time to avoid impulse starting current stopping the motor. |
|            | FAN START TIME   | 0003S       | Set the FAN START TIME. Record time when fan is activated, controller will not start overload protection during this time to avoid impulse starting current stopping the fan.       |
|            | STAR DELAY TIME  | 0006S       | Interval time from star start to delta start.   |
|            | LOAD DELAY TIME  | 0002S       | Unloading in this set time after enter delta running  |
|            | STANDBY DELAY    | 0600S       | When unloading continuously, compressor will automatically stop and enter to standby status if over this set time   |
|            | STOP DELAY       | 0010S       | For NORMAL STOP operation, compressor will stop after it continuously unloads over this set time  |



|                |                  |                                |  |
|----------------|------------------|--------------------------------|--|
|                | RE-START DELAY   | 0100S                          | Machine can start only over this set time at any case(after normal stop, standby or alarm &stop)   |
|                | OTHER            | 0000S                          | Additional function  |
|                | DRAIN OPEN TIME  | 0002S                          | Auto drain control, continuously drain time  |
|                | DRAIN CLOSE TIME | 0060H                          | Auto drain control, continuously drain interval time   |
| OPERATION MODE | START MODE       | LOCAL/<br>REMOTE               | LOCAL :only the button on the controller can turn on and turn off the machine.<br>REMOTE: both the button on the controller and the remote control button can turn on and turn off the machine;  |
|                | LOAD MODE        | AUTOMATI<br>CAL/MANU<br>AL     | MANUAL : only when the pressure is above UNLD P, compressor will unload automatically .For any other case ,the Load/Unload function can only be executed by pressing “load/unload” key.<br>AUTOMATICAL: the load/unload function can be executed by the fluctuation of AIR P automatically |
|                | COM MODE         | DISABLE/<br>BLOCK/<br>COMPUTER | DISABLE: communication function is not activated.<br>COMPUTER: compressor can communicate with computer or DCS as slave according to MODBUS-RTU.<br>BLOCK: compressors can work in a net   |
|                | COM ADD          | 0001                           | Set the communication address in COMPUTER or BLOCK mode. This address is unique for every controller in net  |

|                     |              |                  |  |
|---------------------|--------------|------------------|--|
| BLOCK PARAMETER SET | BLOCK STATUS | MASTER/<br>SLAVE | 1.When service as master in BLOCK, master controls slave; the COM ADD should be set as No.1<br>2.When service as slave in BLOCK, slave is controlled by master |
|                     | BLOCK ON/OFF | ORDER/<br>ALONG  |  |
|                     | TURN TIME    | 0002H            | When master pressure is between BLOCK LOAD P and BLOCK UNLD P, master determines slave to work alternatively after working over this set time                  |
|                     | BLOCK NUMBER | 0002             | Number of air compressors in block net   |
|                     | BLOCK LOAD P | 00.63MPa         | In BLOCK mode, one compressor will start or load when master AIR P is below this set data  |

|                            |                     |                    |  |
|----------------------------|---------------------|--------------------|--|
|                            | BLOCK UNLD P        | 00.78MPa           | In BLOCK mode, one compressor will stop or unload when master AIR P is above this set data   |
|                            | BLOCK DELAY         | 0020S              | In BLOCK mode, when master sends two commands continuously, second command signal delays for this set data   |
| CLR<br>MAINTENANCE<br>TIME | OIL FILTER          | 0000H              | Record total running time of oil filter. If changing new oil filter, the data should be reset by manual operation.   |
|                            | O/A<br>SEPERATOR    | 0000H              | Record total running time of O/A separator. If changing new O/A separator, the data should be reset by manual operation  |
|                            | AIR FILTER          | 0000H              | Record total running time of air filter .If changing new air filter, the data should be reset by manual operation  |
|                            | LUBE                | 0000H              | Record total running time of lubricant. If changing new lubricant, the data should be reset by manual operation  |
|                            | GREASE              | 0000H              | Record total running time of grease. If changing new grease, the data should be reset by manual operation  |
| MAX LIFE TIME              | OIL FILTER          | 2000H              | 1, Alarm prompt when total running time of oil filter is above the set data .<br>2,Set this data to “0000” , alarm function for oil filter running time is not activated     |
|                            | O/A<br>SEPERATOR    | 2000H              | 1, Alarm prompt when total running time of O/A separator is above the set data.<br>2,Set this data to “0000” ,alarm function for O/A separator running time is not activated |
|                            | AIR FILTER          | 2000H              | 1, Alarm prompt when total running time of air filter is above the set data.<br>2,Set this data to “0000” , alarm function for air filter running time is not activated      |
|                            | LUBE                | 2000H              | 1, Alarm prompt when total running time of lubricant is above the set data.<br>2, Set this data to “0000”, alarm function for lubricant running time is not activated.       |
|                            | GREASE              | 2000H              | 1, Alarm prompt when total running time of grease is above the set data.<br>2,Set this data to “0” , alarm function for grease running time is not activated                 |
| LANGUAGE                   | CHINESE/<br>ENGLISH | ENGLISH            | ENGLISH: Displays in English<br>CHINESE: Displays in Chinese   |
| PHASE PRO                  |                     | ENABLE/<br>DISABLE | Enable: PHASE PRO function is activated<br>Disable: PHASE PRO function is not activated  |

|                      |      |      |  |
|----------------------|------|------|--|
| NEW USER<br>PASSWORD | **** | **** | User could modify the user password by old user password or factory password |
|----------------------|------|------|--|

#### 1.2.4,Factory Parameter

The view and modification of factory parameter requires a factory password, The modification step is same as customer parameter modification. Main function is as below:

| PARAMETER             | Initial Data                        | Function  |
|-----------------------|-------------------------------------|---|
| MOTOR RATED<br>CURR   | Maximum motor overload<br>data /1.2 | When the current of motor is more than 1.2 times of the set data , the unit will stop for overload feature. (see table2.1.1)  |
| FAN RATED<br>CURR     | Maximum fan overload<br>data/1.2    | When the current of fan is more than 1.2 times than the set data , the unit will stop for overload feature.   |
| ALARM DISC T          | 105℃                                | When discharge temperature reaches this set data, compressor will alarm   |
| STOP DISC T           | 110℃                                | When the discharge temperature reaches this set data, compressor will alarm and stop  |
| STOP AIR P            | 00.90MPa                            | When pressure reaches this set data ,compressor will alarm and stop   |
| UNLD P LIM            | 0.85MPa                             | This data is the maximum of UNLD P. The UNLD P in the customer parameter must be set no higher than this data.  |
| TOTAL LOAD<br>TIME    | 000095 H                            | Modify the TOTAL LOAD TIME  |
| TOTAL RUN<br>TIME     | 000100 H                            | Modify the TOTAL RUN TIME   |
| FAULT<br>RECORD RESET | ****                                | Input"8888"and press "set" button to clear all the history fault record.  |
| CURR<br>UNBALANCE     | 0006                                | When MAX -MIN CURRENT $\geq (1+ \text{SET DATA} * \text{MIN CURRENT} / 10)$ ,the unbalance protection is activated ,compressor will alarm and stop, reporting MOTOR CURR UNBAL<br>If the set data $\geq 15$ , the unbalance protection will not be activated. |
| OPEN PHASE<br>PROT    | 002.0S                              | If OPEN PHASE protection $\geq 20$ seconds, OPEN PHASE protection is not activated  |
| FREQ SEL              | 50Hz/60Hz                           | Choose operation power frequency.(This parameter influences the sample current value. When this data is set incorrectly, the actual current is 1.2 times different from displayed current value)  |
| OPEN PHASE<br>PROT    | 002.0S                              | If OPEN PHASE protection $\geq 20$ seconds, OPEN PHASE protection is not activated  |
| PROD.DATE             | 9999-99-99                          | Production date set by manufacturer   |
| SERIAL NO.            | 9999999999                          | Serial No. set by manufacturer  |

## 2, Contoller Function and Technical Parameter

- 2.1,Digital input &output: 9 points of digital input, 10 points of digital relay output
- 2.2,Analog input& output: 2 points of Pt100 temperature input, 2 points of 4~20mA pressure signal input,2 groups of three phases current input (CT provided) ;
- 2.3,Input voltage of phases: three phase 380V;
- 2.4,Controller operation power: 220V、50/60Hz、12VA (Recommond20VA);
- 2.5,Measurement :
- 2.5.1Oil temperature:  $-20\sim 150^{\circ}\text{C}$ ; Accuracy:  $\pm 1^{\circ}\text{C}$
- 2.5.2Discharge temperature:  $-20\sim 150^{\circ}\text{C}$ ; Accuracy:  $\pm 1^{\circ}\text{C}$
- 2.5.3Running time: 0~999999H
- 2.5.4Current: 0~999.9A
- 2.5.5Pressure: 0~1.60MPa Accuracy:0.01Mpa
- 2.6,Phase protection: When compressor is at stop mode and detects open phase, response time $\leq 2\text{s}$ ;
- 2.7,Motor protection: This controller provides open phase, unbalance and overload protection to motor and fan.
- 2.7.1Open phase protection: When any phase opens, the response time equals to set time; This function is not activated when OPEN PHASE PROTECTION time is set over 20s
- 2.7.2Unbalance protection: when MAX-MIN current  $\geq \text{SET DATA} * \text{MIN current}/10$  ,respond time is 5s;
- 2.7.3Protection features of overload (time unit: second), please see following table (table 2.1.1) for your reference. Multiple= $I_{\text{actual}} / I_{\text{set}}$  , response time is shown in following table (table 2.1.1) according to overload multiples from 1.2 times and 3.0 times .


| $I_{\text{actual}}/I_{\text{set}}$<br>Time parameter | $\geq 1.2$ | $\geq 1.3$ | $\geq 1.5$ | $\geq 1.6$ | $\geq 2.0$ | $\geq 3.0$ |
|--|------------|------------|------------|------------|------------|------------|
| Response time (S)                                    | 60         | 48         | 24         | 8          | 5          | 1          |

Table 2 curve table for protection of motor

- 2.8, Temperature protection: when actual temperature measured is higher than temperature set; response time $\leq 2\text{s}$
- 2.9, Contact capacity of output relay: 250V,5A; Contact endurance :500000 times;
- 2.10, Current error is less than 1.0%.;
- 2.11,RS—485communication

## 3, Model and Specification

### 3.1, Model explanation

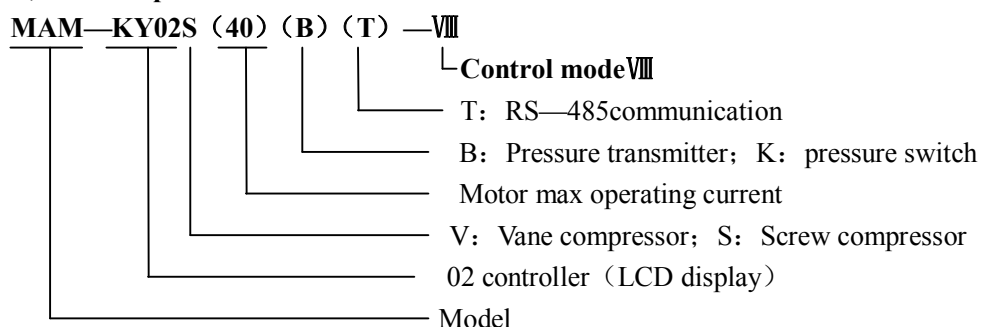

### 3.2 Power specification sheet for corresponding motor.



| Specification | Current range (A) | Corresponding main motor power (KW) | Remark  | Description   |
|---------------|-------------------|-------------------------------------|---------|---|
| KY02 (20)     | 8~20              | Below 11                            |         | Fan has three levels of current, such as 0.2-2.5A, 1-5A and 4-10A, determined by current of motor |
| KY02 (40)     | 16~40             | 11-18.5                             |         |   |
| KY02 (100)    | 100               | 22-45                               |         |   |
| KY02 (200)    | 200               | 55-90                               |         |   |
| KY02 (400)    | 400               | 110                                 |         |   |
| KY02 (600/5)  | 600/5             | 200-250                             | With CT |   |

## 4, Installation

### 4.1, Mechanical Installation



#### 4.1.1, CT Installation

The CT shall be installed at a place where the current of motor cable can be measured, thus, controller can be set according to instructions on motor nameplate, and the detailed dimension is shown as below:

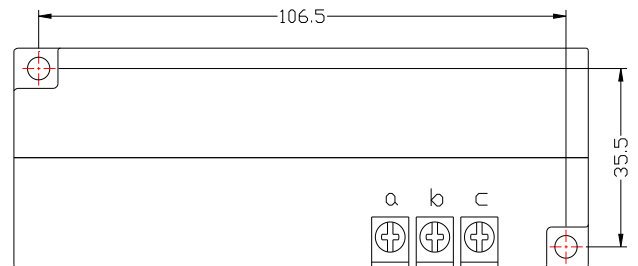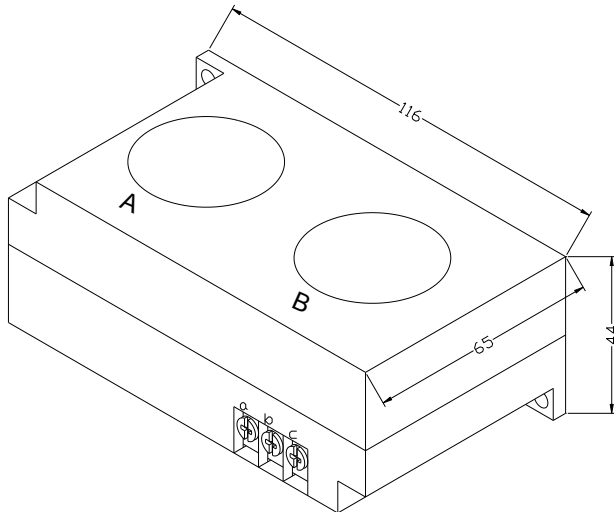

Picture1、CT1 Structural dimension of CT1 (φ36 hole)

Picture2、CT1 Installation dimension

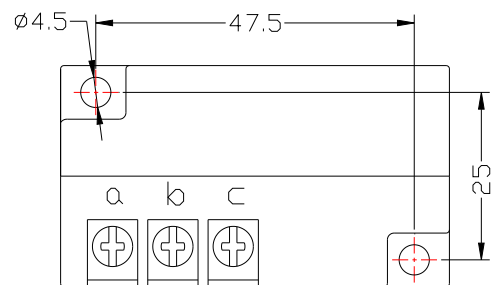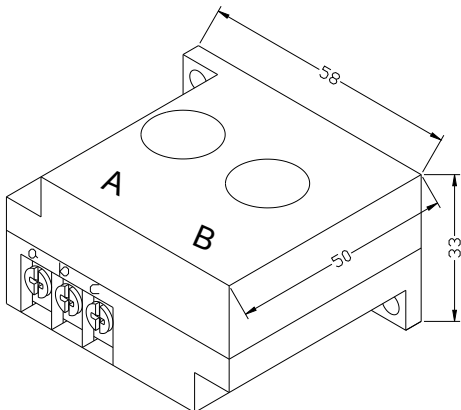


Picture 3、Structural dimension of CT2 (φ10 hole)

Picture 4、CT2 Installation dimension

### 4.1.2, Controller Installation

When install the controller, room should be left around controller for wiring. The specific dimension is shown as below:

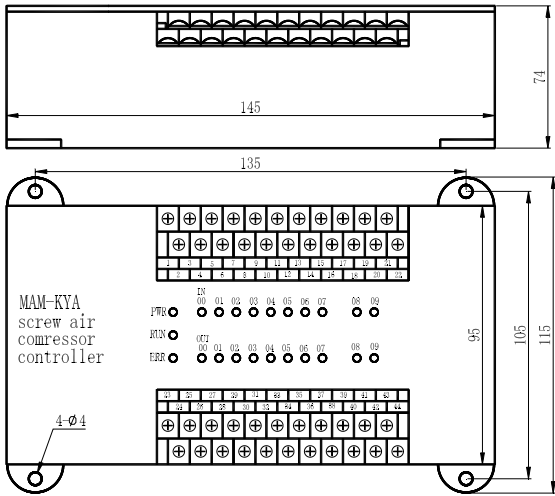

1、Indicator (IN):

The corresponding digital input terminal of 00、 01、 02、 03、 04、 05、 06、 07 is 20、 19、 18、 17、 16、 15、 14、 13.

2、Indicator (OUT)

The corresponding digital input terminal of 00、 01、 02、 03、 04、 05、 06、 07、 08、 09 is 27、 28、 29、 30、 31、 35、 36、 37、 38、 39


3、 Power Indicator: PWR

4、 Run indicator: RUN


5、 Error indicator: ERR

Picture 5、 Controller structure dimension

### 4.1.3, Panel Function and Installation Panel Structure 165×102×50 (mm)

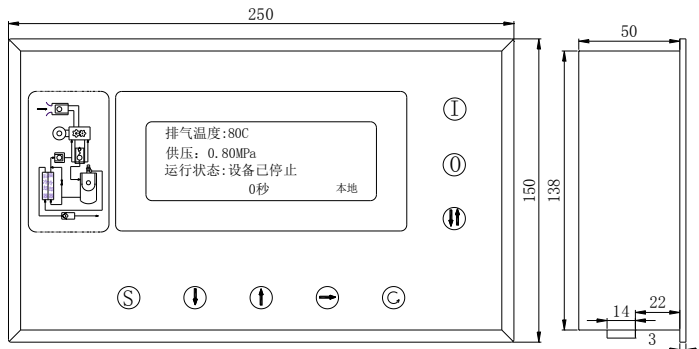


Picture 6, Panel Dimension

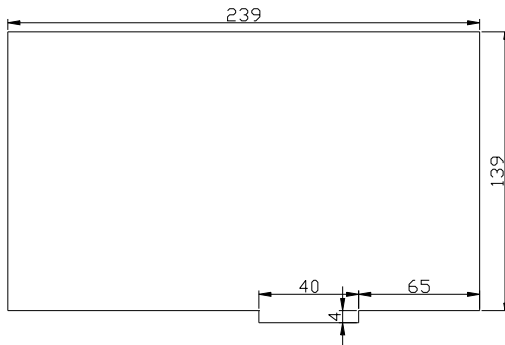

Picture 7, Hole dimension

## 4.2, Electrical Connections

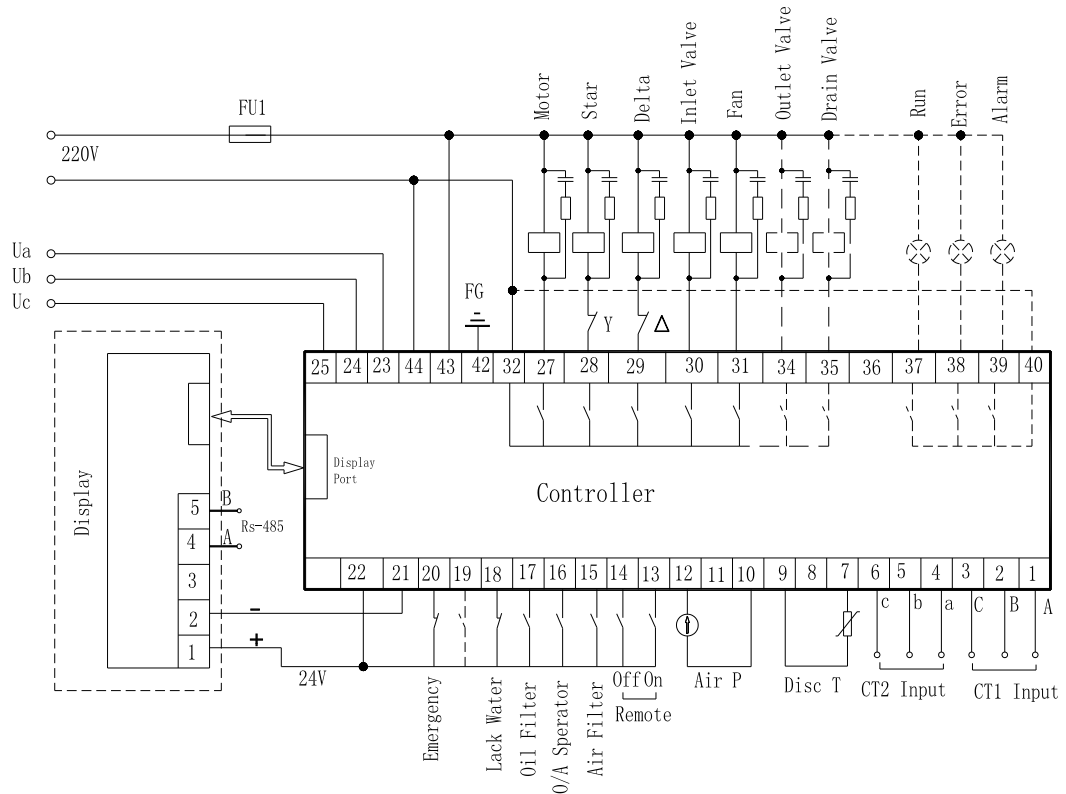

Picture 8、 Terminal arrangement diagram

### Monitor connection terminal:

There are five connection cables and a communication cable which are used for display connection , RS-485 communication ,24V power supply.

### Controller connection terminal:

Communication cable is used to connect monitor and controller.

|            |                               |       |                             |      |                             |
|------------|-------------------------------|-------|-----------------------------|------|-----------------------------|
| 1.2.3      | CT1:Motor current transformer | 4.5.6 | CT2:Fan current transformer | 7、 9 | Discharge temperature input |
| 23、 24、 25 | Phase input                   | 27    | Motor contactor             | 28   | Star contactor              |
| 29         | Delta contactor               | 30    | Inlet valve                 | 31   | Fan                         |
| 34         | Outlet valve                  | 37    | Run indicator               | 38   | Error indicator             |
| 39         | Alarm indicator               | 40    | Communication port 2        | 42   | GND(analog)                 |
| 43,44      | 220V                          |       |                             |      |                             |

\* Note : Electromagnetism coil shall be connected nearest with RC snubber during wiring, Dotted line is for extra function

# 5, Alarm Function

## 5. 1、 Monitor Indication

### 5.1.1, Air Filter Alarm

- ①. Air filter block check.

The monitor displays AIR BLOCK by checking pressure differential switch close.

- ②. Air filter running time alarm

The text displays AIR TIME END when running time of the air filter is exhausted.

### 5.1.2, Oil Filter Alarm

- ①. Oil filter block check.

The monitor displays OIL BLOCK by checking pressure differential switch close.

- ②. Oil filter running time alarm

The text displays OILTIME END when running time of the oil filter is exhausted.

### 5.1.3, O/A Separator Alarm

- ①. O/A separator block check.

The monitor displays O/A BLOCK by checking pressure differential switch close.

- ②. O/A filter running time alarm

The text displays O/A TIME END when running time of the oil filter is exhausted.

### 5.1.4, Lubricant Alarm

The text displays LUBE TIME END when running time of the lubricant is exhausted.

### 5.1.5, Grease Alarm

The text displays GREASE TIME END when running time of the grease is exhausted.

### 5.1.6, Discharge Temperature High Alarm

The text displays DISC T HIGH when DISC T is higher than ALARM DISC T set in FACTORY PARAMETER.

## 5.2, Controller Indicator

| Indicator      | Meaning and function   | Indicator status   |
|----------------|--|--|
| Power          | Controller power on  | PWR indicator on   |
| Run            | Controller run   | RUN indicator on   |
| Error          | Failure and stop   | ERR indicator blink  |
| Digital input  | Terminal 26~18 digital input                                   | IN00~08 corresponding indicator on. Indicator will not be illuminated if input has no function |
| Digital output | Terminal 39、 40、 41、 42、 43、 46、 47、 49、 50、 51 digital output | OUT00~09 corresponding indicator on  |
| Data storage   | Data and time set  | PWR blink once   |



# 6,Controller Protection

## 6.1,,Motor protection

MAM—KY02Scompressor controller provide short circuit ,block, overload, lack phase, unbalance protection to motor.

| Electronic failure | Failure display                 | Reason   |
|--------------------|---------------------------------|--|
| Short circuit      | Display “Motor/FAN OVER LOAD”   | Short circuit or wrong current set                   |
| Current Block      | Display “Motor/FAN BLOCK”       | Overload, bearing wear and other mechanical failure  |
| Overload           | Display “Motor/FAN OVERLOAD”    | Overload, bearing wear and other mechanical failure  |
| Lack phase         | Display “Motor/FAN *LACK PHASE” | Power supply, contactor and open phase of motor      |
| Unbalance          | Display “Motor/FAN UNBALANCE”   | Poor contact of contactor, inside open-loop of motor |

## 6.2,Protection of Discharge Temperature High

When DISC T is above the STOP DISC T, the controller will alarm and stop the machine. THIS FAULT displays DISC T HIGH

## 6.3,Protection of Air Compressor anti-reversal

When compressor is at stop status and three phases sequence is not in order, THIS FAULT displays PHASE WRONG1, and the controller cannot start the motor. Change the position of any arbitrary two phase power lines and check the rotation of motor.

## 6.4,Protection of Air Pressure High

When the AIR P is above the MAX LIM P, the controller will alarm and stop the machine. THIS FAULT displays HIGH P.

## 6.5, Protection of Sensor Fault

When pressure sensor or temperature sensor is disconnected, the controller will alarm and stop the machine. THIS FAULT displays \*\*SENSOR FAULT.

## 6.6, Protection of Air compressor Open Phase


When compressor is at stop status and open phase is detected, THIS FAULT displays PHASE WRONG2, and the controller cannot start the compressor. Check the three phase.

# 7, Troubleshooting


## 7.1、 This Fault Review

Alarm and stop caused by the external parts of controllers may be removed by checking THIS FAULT or FAULT RECORD, method is shown as below:

Press“↓” to move the cursor to “RUN PARAMETER” menu, then press“→”,the secondary menu will show as below:

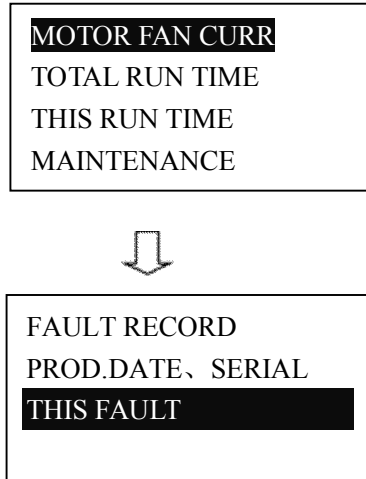

Move the cursor to “THIS FAULT” menu Then press“→”to switch to the following menu (display failure) :

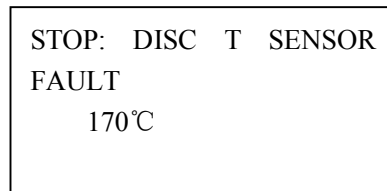

User can reset fault according to the information prompted

## 7.2、 Common Failures and Causes:

| Failure                    | Reason   | Solution  |
|----------------------------|--|---|
| High discharge temperature | Bad vent condition, Oil shortage etc.                        | Check the vent condition and lubricant amount etc.                        |
| Temperature Sensor Failure | Cable broken or PT100 failure                                | Check the wiring and PT100  |
| High Pressure              | Pressure too high or the pressure sensor failure             | Check the pressure and the pressure sensor                                |
| Pressure Sensor Failure    | Cable broken, Sensor failure or the cables connect reversely | Check the wiring and pressure transmitter                                 |
| Lack water                 | Water pressure switch failure                                | Check water pressure switch   |
| Open Phase                 | Power open phase or the contactor failure                    | Check the power and contactors  |
| Overload                   | Voltage too low, tubes block, bearing wear off or other      | Check the set data, voltage, bearings, tubes and other mechanical system. |

|                                  |   |  |
|----------------------------------|---|--|
|                                  | mechanical failure or wrong set data etc.                                   |  |
| Unbalance                        | Current unbalance, contactor failure or the internal open loop of the motor | Check the power, contactor and the motor                       |
| Wrong Phase Sequence             | Phase sequence reversal or open phase                                       | Check the wiring   |
| Fan fail to run                  | Fan failure, contactor failure, no control output                           | Check wiring   |
| Motor overload during start      | Master start time set to less than the star delta delay time                | Reset the master start time longer than star delay + 2 seconds |
| Main Contactor shakes frequently | The emergency stop button is loose or controller is reset by interference   | Check if the coil of contactor connects with RC snubber or not |

# 8, Schematic Diagram:

